

Tray 2 and Tray 3 separation pad assembly (separation block assembly)

1. Remove Tray 2 and Tray 3.
2. Remove two screws (callout 1).



NOTE Be careful during reinstallation. Make sure that you do not cross thread the plastic screw mounting holes when you reinstall these screws.

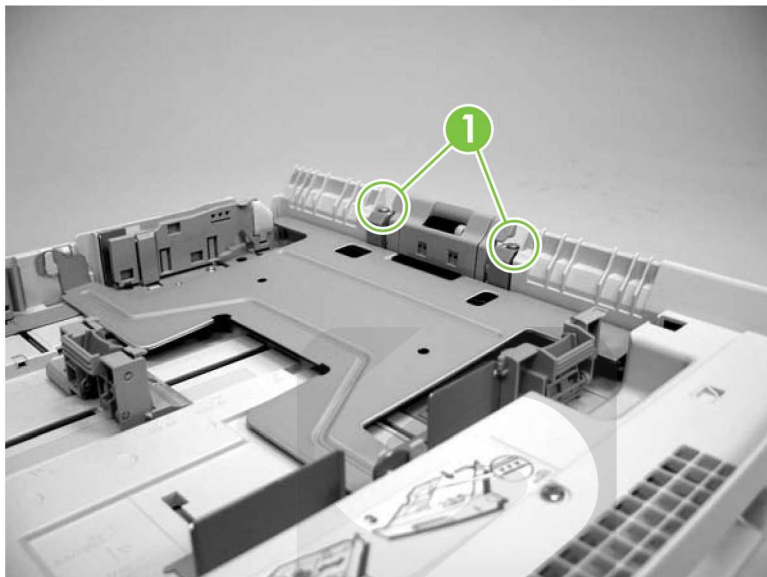


Figure 5-20 Remove the Tray 2 and Tray 3 separation pad assembly (1 of 2)

3. Lift up the separation pad to remove it.

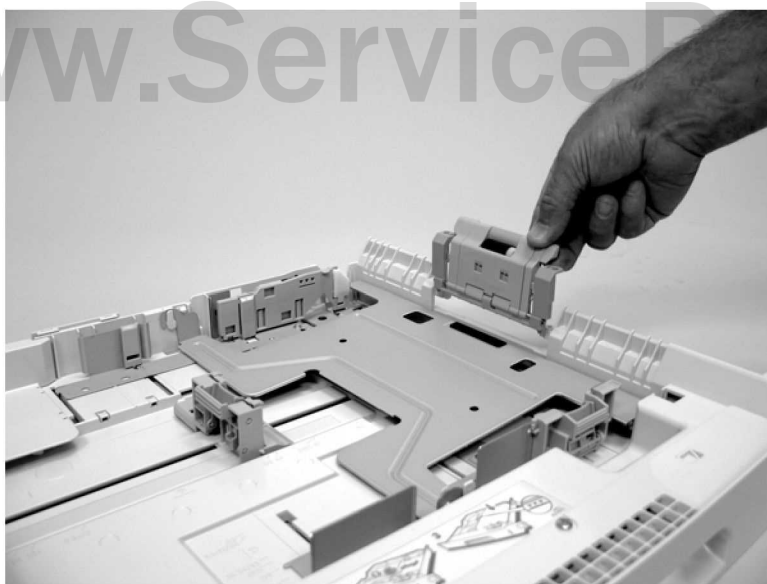


Figure 5-21 Remove the Tray 2 and Tray 3 separation pad assembly (2 of 2)

4. Repeat this procedure for the remaining tray.